INSTRUCTIONS FOR TYPE CNAB-6 AND CNAB 62 COMBINATION LOCKS

www.alanmorganmasterlocksmiths.co.uk

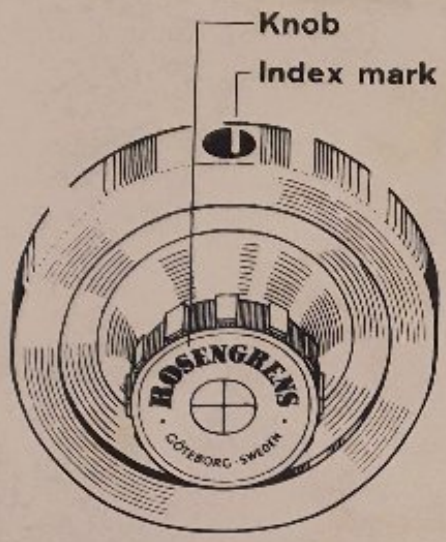

The lock must be dialled to the proper combination before the door can be opened. The combination always comprises **six characters** which must be turned to the index line at the top of the lock in the manner described at right. Always turn the knob with a smooth, gentle motion and without using force. On delivery all locks are set for combination 111111. It is thus important to reset the lock for your own secret combination before using the safe. See the section headed "RESETTING".

NOTE: If you turn a character too far, you must start all over again.

UNLOCKING

Check the safe door-handle, if there is one, to make certain that it is turned to the left as far as it will go before you turn the knob on the lock.

1
- Turn the knob on the lock all the way to the right
- Turn the knob all the way to the left **until you hear or feel a gentle click.**
- Turn the knob right until the first character in the combination is in line with the index mark.
- Turn all the way to the left
- Turn right until the second character is in line with the index mark.
- Turn all the to the left
- Turn the other characters in line with index mark in order, turning back all the way to the left after each of them.

2
- When you have turned all the way to the left after the last character, turn all the way to the right
- The lock is now unlocked and the door can be opened. If there is a handle which turns, it should be turned to the **right** to open the door.

LOCKING

3
- Close the door. If there is a handle which turns, it should be turned all the way to the **left.**



- Turn the knob on the lock all the way to the left **until you hear or feel a gentle click.**
- Make certain that the door is locked, by turning the knob all the way to the right. If it has locked properly you will be unable to open it. If there is a handle that turns, you should not be able to turn it.

Note: If the door bolts have been locked in the withdrawn or extended position, the lock must be unlocked as described in 1 and 2, before the door can be closed.

www.alanmorganmasterlocksmiths.co.uk

RESETTING THE COMBINATION

The new combination must always comprise six characters. You can select any six of the following (In any order):

+ XVO987654321

Never choose a combination with six identical characters. Don't select a telephone number or other familiar number which can easily be deduced.

Change over to a new combination must be made with the lock unlocked and the door open. If the door is locked it must therefore be unlocked as instructed in 1 and 2, and opened.

- With the door open, the **existing** combination is dialled as instructed in 1.

SET COMBINATION AS INSTRUCTED IN 1 THEN CONTINUE WITH 4

4

- When you have turned the knob all the way to the left after the last character, turn it right to +. (Plus sign)
- Open cover-plate — if there is one — on the inside of the door, and lift off the yellow lid on the lock (first upward and then outward). When viewed from the inside, the lock appears as shown in the explanatory diagram at right. Never disturb the internal parts of the lock.
- Now turn the knob to the left to the **0 (ZERO) character.**
- Lift and turn the resetter E a half turn to the right against its stop.
- Now dial your new **secret combination** as instructed in 1.

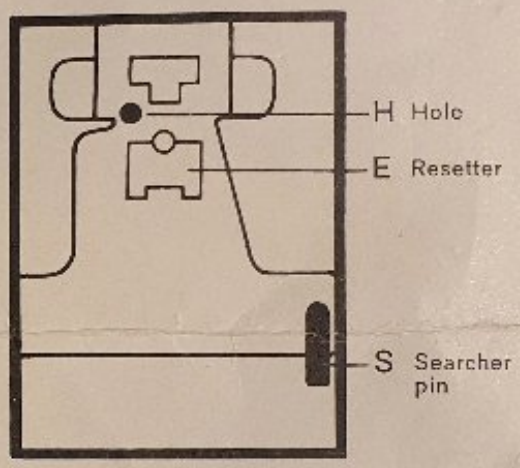

SET COMBINATION AS INSTRUCTED IN 1 — THEN CONTINUE WITH 5

5

- Turn the resetter E back a half turn to the left against its stop.
- Turn the knob on the lock to the right and then all the way to the left
- Now check the lock by dialling the **new** combination as instructed in points 1 and 2. If the door is only provided with the knob on the lock and has no handle which can be turned, the bolts at the edge of the door should now be withdrawn. If the door has a handle it should now turn freely in either direction. **If this can not be done the combination has been dialled wrongly and must be corrected. See the section headed "CORRECTION"** in the next page.

Dial the combination as instructed in point 1.

SET COMBINATION AS INSTRUCTED IN 1 THEN CONTINUE WITH 6

6

- After you have turned the knob all the way to the left after the last character, turn to the right to +. (Plus sign)
- Replace the yellow lid without forcing it. (Inward and downward movement)
- Turn the knob all the way to the right
- Close the cover on the door if there is one. The door can now be closed and locked; see the section headed "LOCKING".

www.alanmorganmasterlocksmiths.co.uk

123556

CORRECTING A RESETTING MISTAKE

7
- Turn the knob on the lock all the way to the left **until you hear or feel a gentle click.**
- Remove searcher pin S and insert it in hole H.
- Press the searcher in gently while slowly turning the knob to the right until the searcher slips in one step.
- Then turn alternately to left and right until the finder has been fed in a total of six steps (always remembering **to turn all the way to the left).**
- Turn all the way to the left and then turn right to the character O. (ZERO)
- REMOVE the searcher and return it to its place.
- Turn the resetter E a half turn to the right against its stop.
- Now dial your new **secret combination** as instructed in point 1 and continue as instructed in point 5.

Q46210

Stratford
SAFE COMPANY LTD.
Security is our business
STIRLING CORNER, BOREHAM WOOD, HERTS. TEL. ELSTREE 2021

www.alanmorganmasterlocksmiths.co.uk

GB 20.411 s